



UNDERWRITER'S KNOT INSTRUCTIONS

Ensuring cords stay secure at the socket
if pulled and preventing the unplugging
of cords from electrical connections.
Perfect for repairing and rewiring lamps
or light fixtures.

****For SPT type wire;**

The ribbed wire is neutral, and the smooth wire is positive



STEP 1

Start with SPT wire



STEP 2

Pull apart the SPT wire
a few inches



**For SPT type wire;

The ribbed wire is neutral,


The smooth wire is positive

positive neutral




STEP 3

Form a loop with
the right side

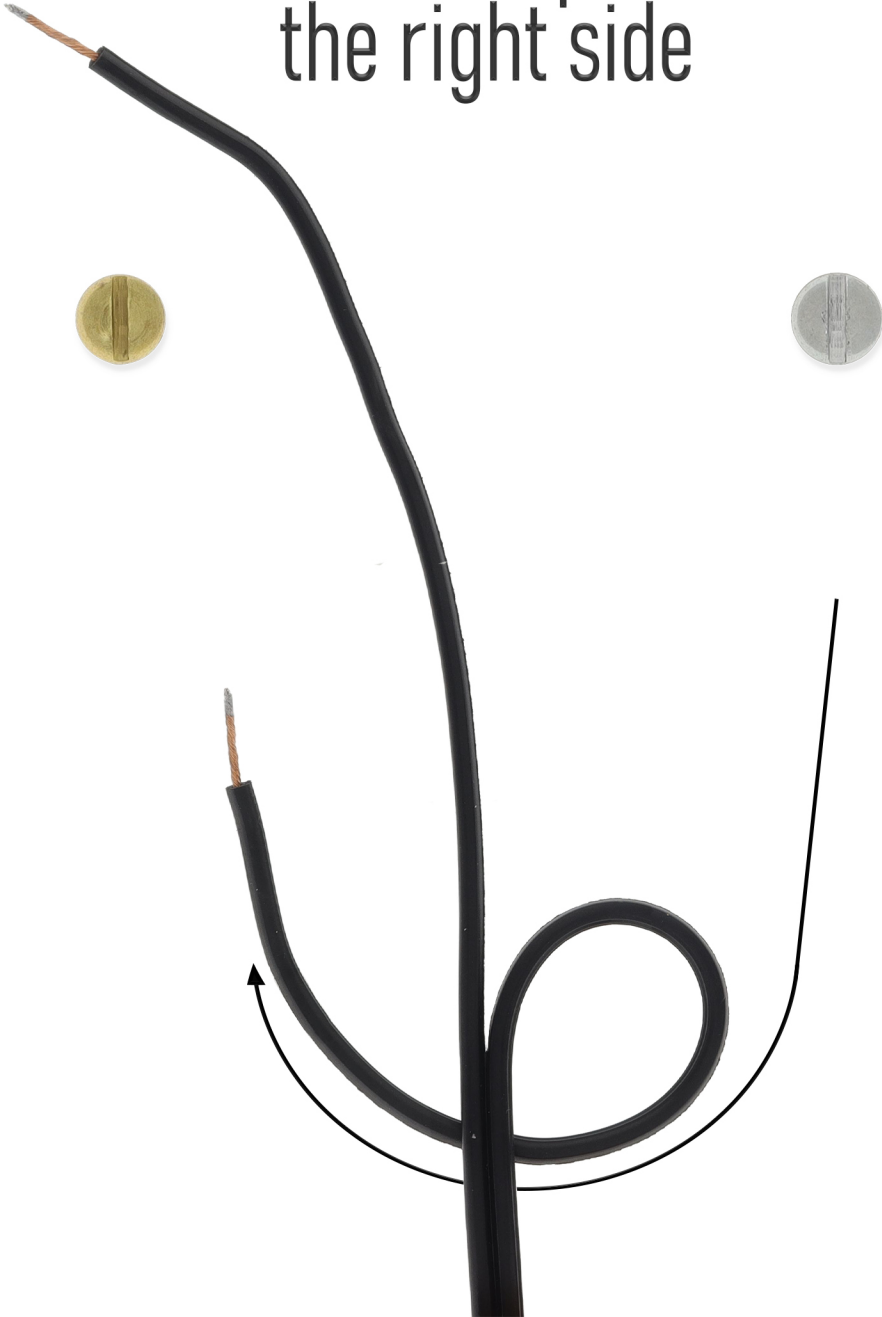


STEP 4

Take the left side down

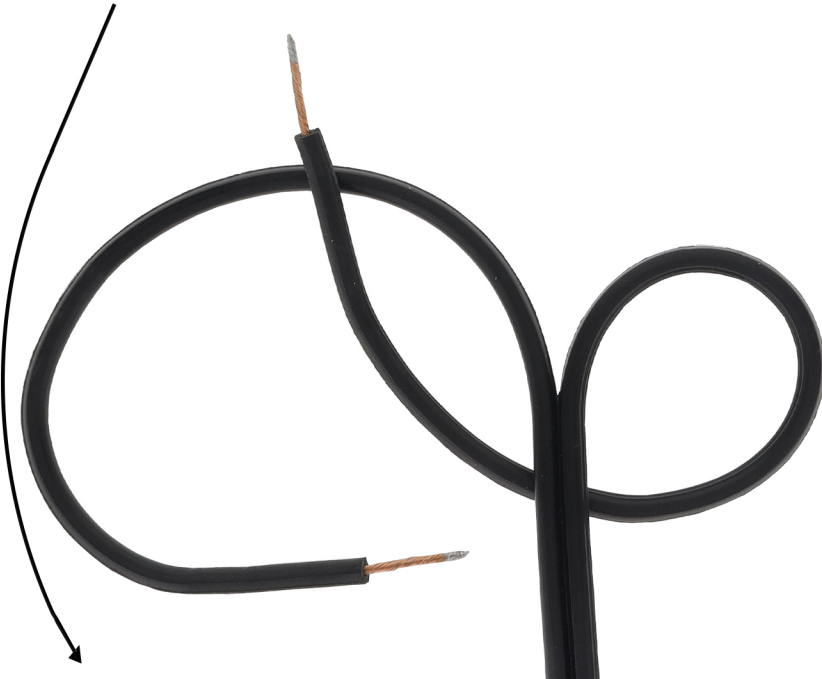

STEP 5

Pass it through the right loop

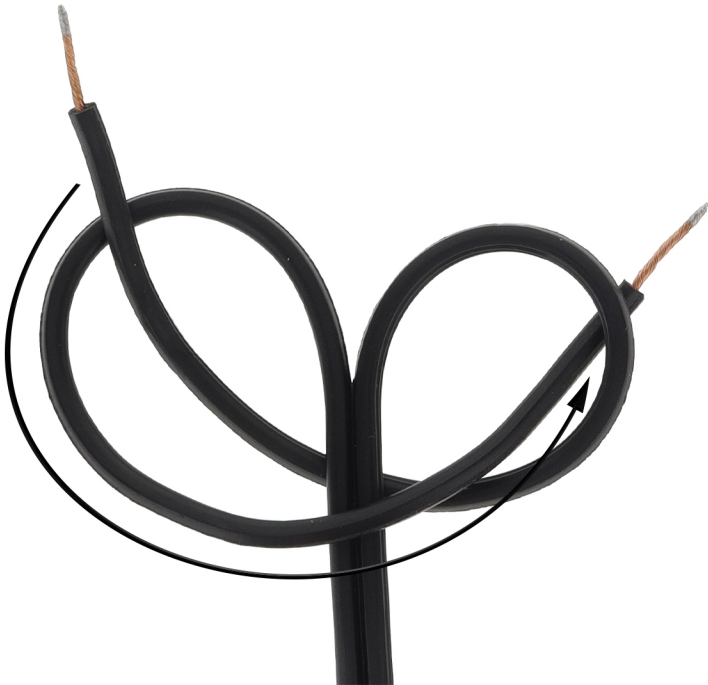

STEP 6

Pull the left wire up to
be even with the right



STEP 7

Twist the ends around the terminals



STEP 8

The knot is secure
The connection is complete

****For SPT type wire:**

The smooth wire is positive The ribbed wire is neutral

