


HOW TO WIRE SWT1 SWITCH


STEP 1.) Cut the length of SPT-2 Wire you need for your project

STEP 2.) Cut a notch into the **HOT** side of the wire leaving enough excess to cover the piercing terminal inside the switch.

***REMEMBER** Smooth = **HOT** / Ribbed = **NEUTRAL**

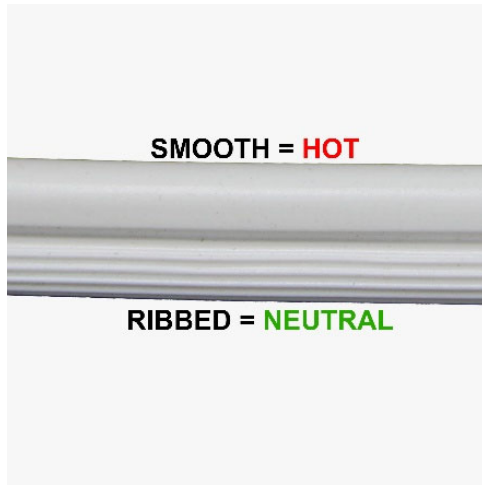

Step 3.) Place the cut wire into the switch so that the wire goes over the piercing terminal and butts up against the shoulder

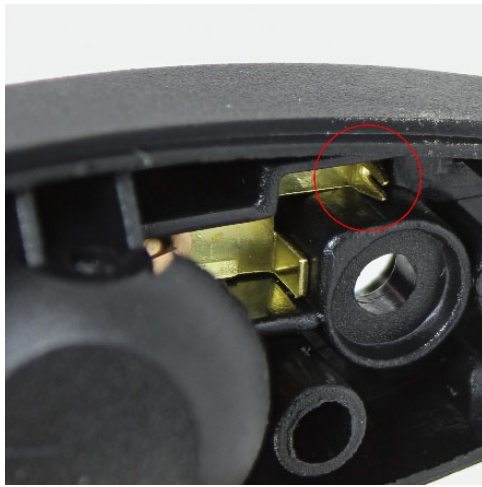

Step 4.) Press the cover down into the wire so that the notches push the wire into the piercing terminal and screw closed.

